

BF302 bed frame installation guide



Bed Frame Parts List

4 x Triangle
Corner Brackets

2 x Middle Support Beam
Brackets (4 for King Size)



4 x Rectangle
Corner Brackets


2 x Support Legs
(4 for King Size)

Bed Frame Bolts & Nuts List

**20 x Medium Bolts
(for headboard & footboard)**

**20 x Short Bolts
(for sideboard & 4 corner feet)**

**10 x Long Bolts
(for metal side rails)**

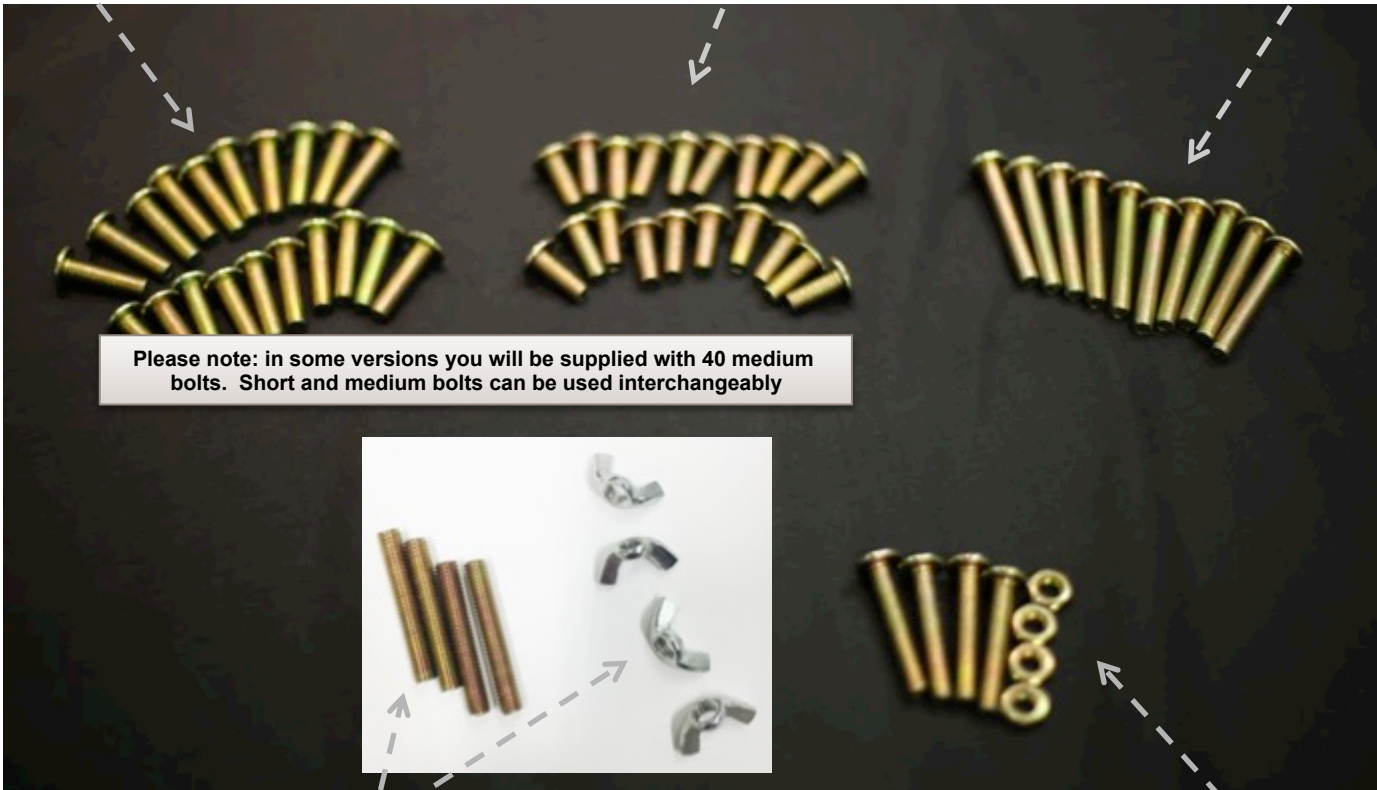

**4 x Headless Bolts & Wing Nuts
(to fix wings to bed head)**

**4 x Long Bolts with Nuts
(for metal support legs)**

Join the 2 Wing Pieces to Bed Head

Unzip bed head located at back of headboard



Place the 'wing piece' to next to bed head. Turn the headless bolts onto the side of the wings



From inside the bed head, use the wing nuts to secure the wing panels onto the bed head

Position Different Brackets in the Right Spots




Position middle support beam bracket here

Position triangle bracket here

Position rectangular bracket here

How the Corners Should be Joined

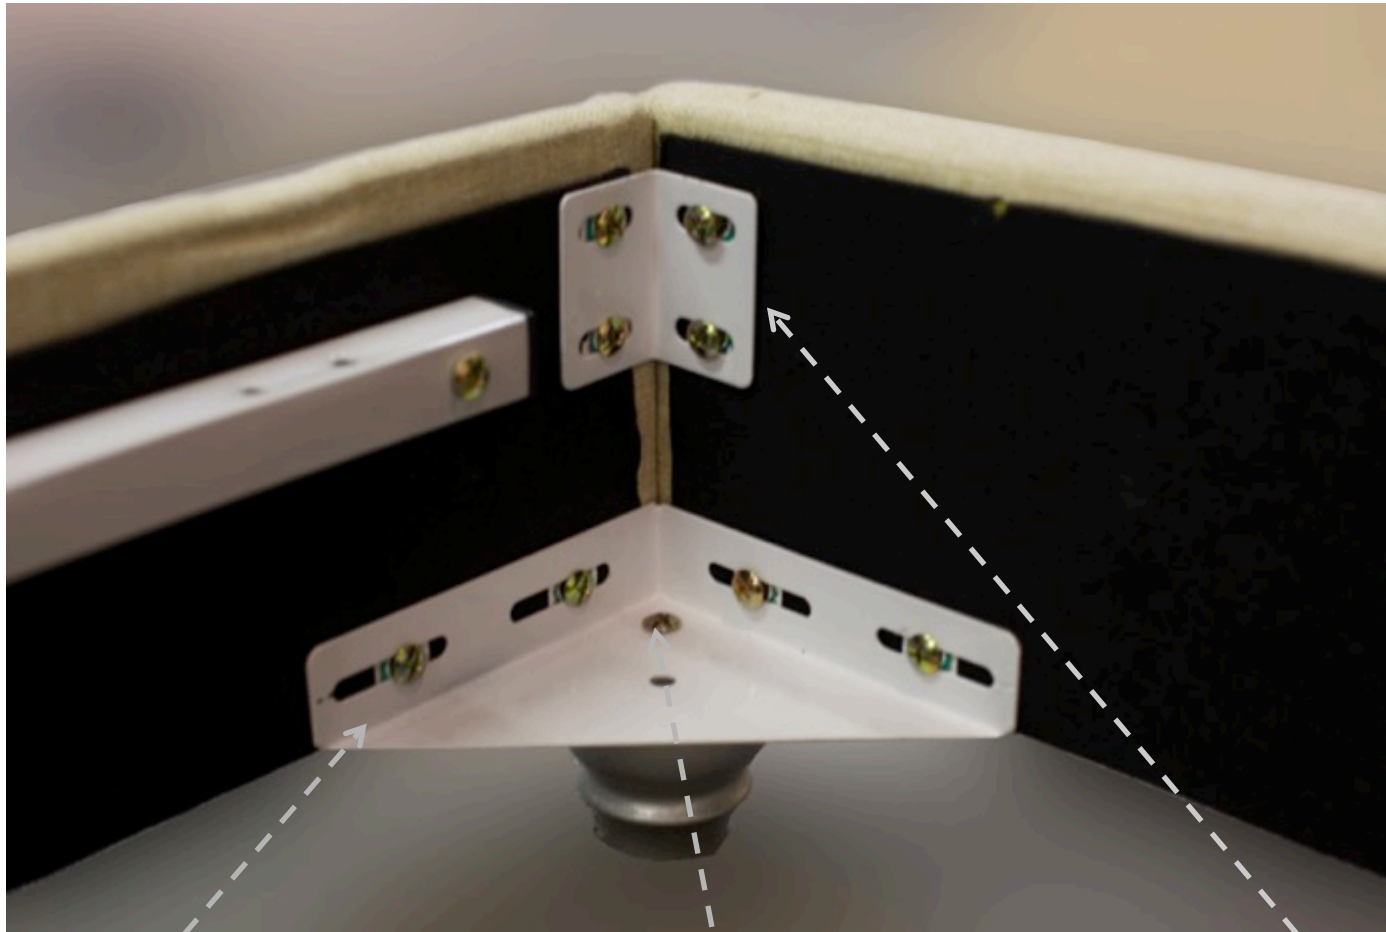


**Position triangle
bracket here**

**Install round feet onto triangle
bracket with short bolt**

**Position rectangular
bracket here**


Joining the Metal Side Railings to the Side Panels

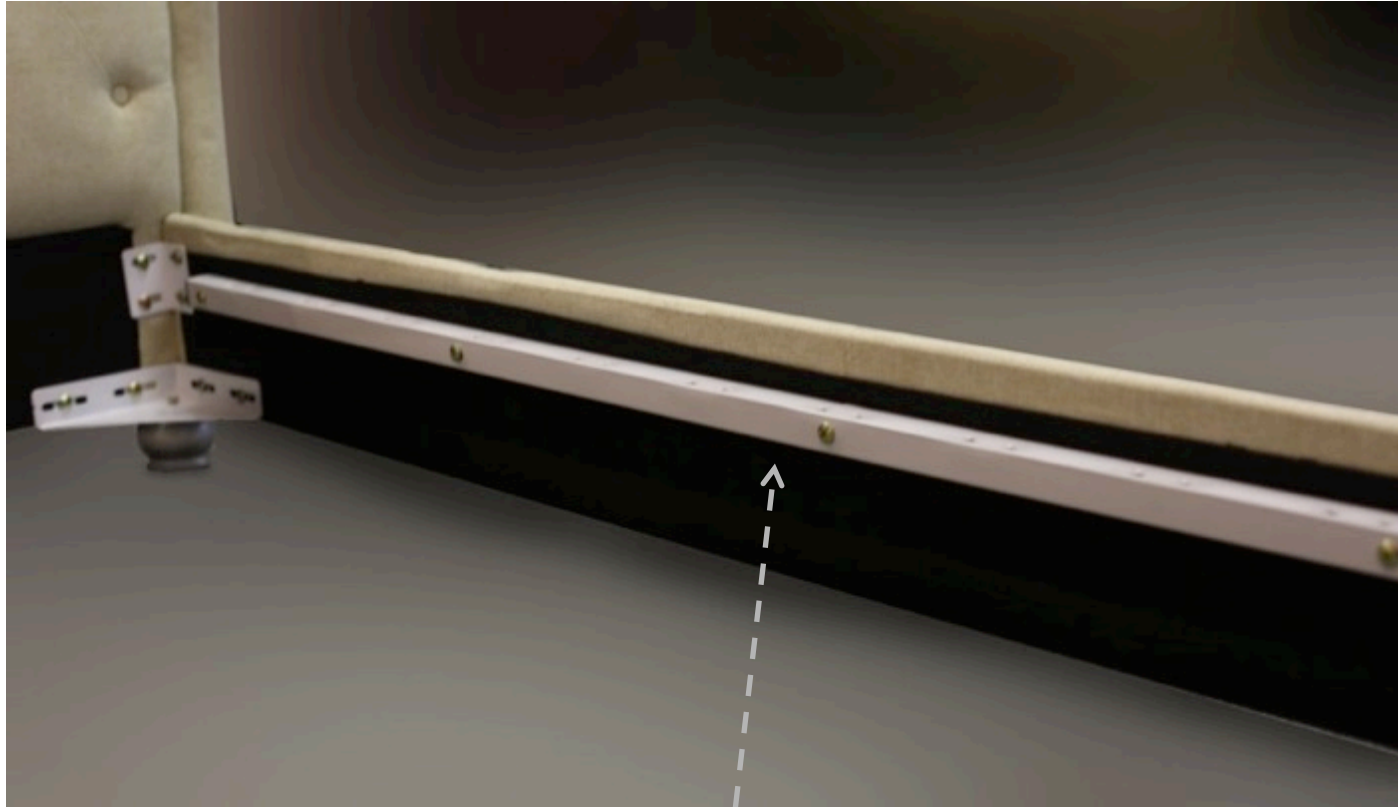

Attach side railing to side panel using
5 long bolts for each side

Joining the Metal Side Railings to the Side Panels

Position the middle support beam on top of the brackets fixed to the headboard and footboard

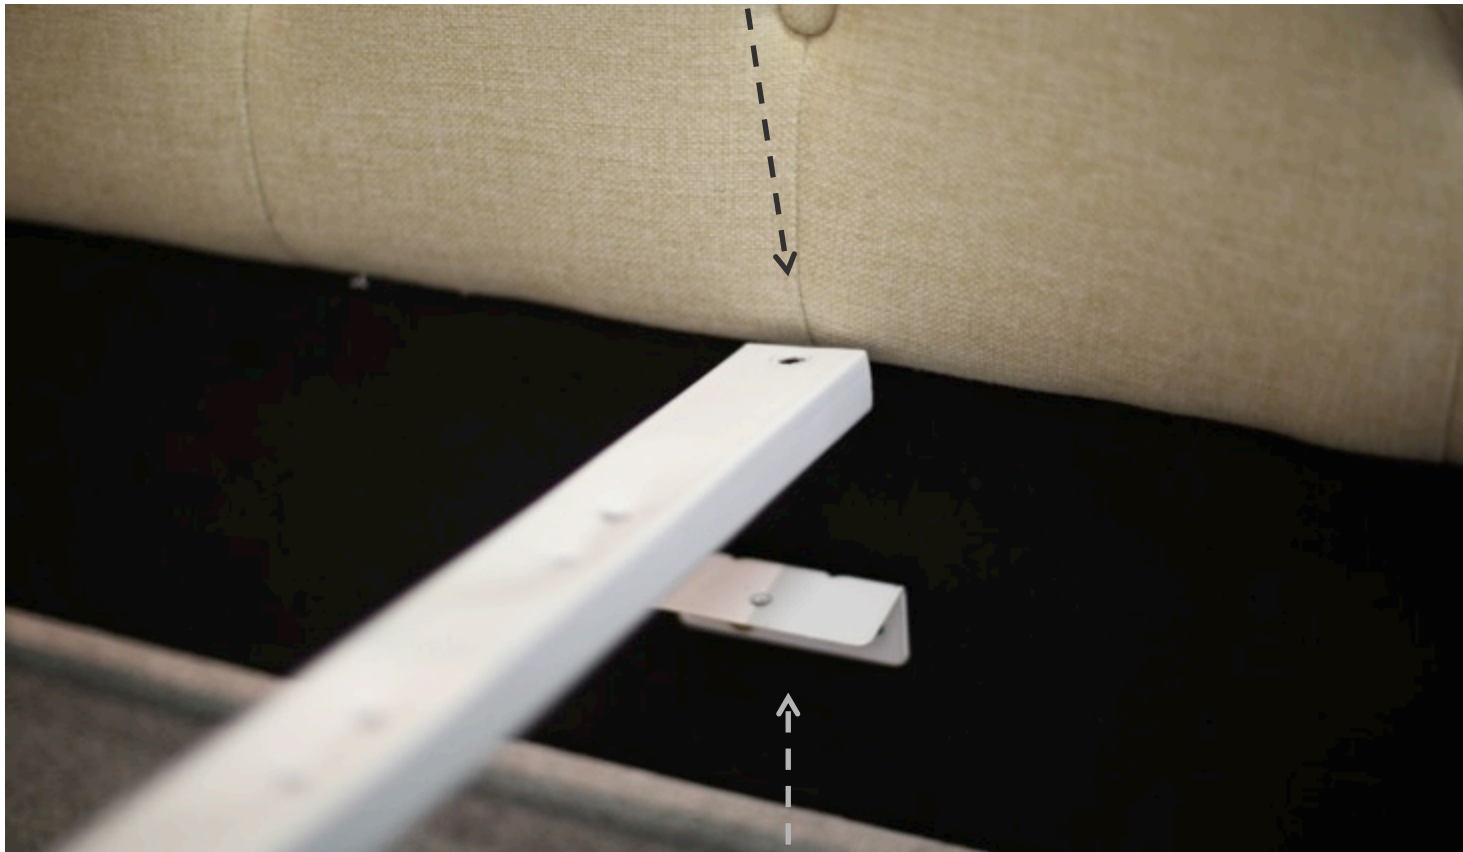

Use 1 long bolt to lock the beam to the bracket

Joining the Metal Side Railings to the Side Panels

Connect the plastic clips to the wooden slat pieces

Place metal support legs underneath the middle support beam, and fix using the long bolts and nuts provided



Once all the plastic clips are attached to the wooden slats, push down onto the bed frame beams to lock in place