

# Gas Lift Bed Frame – Installation Guide

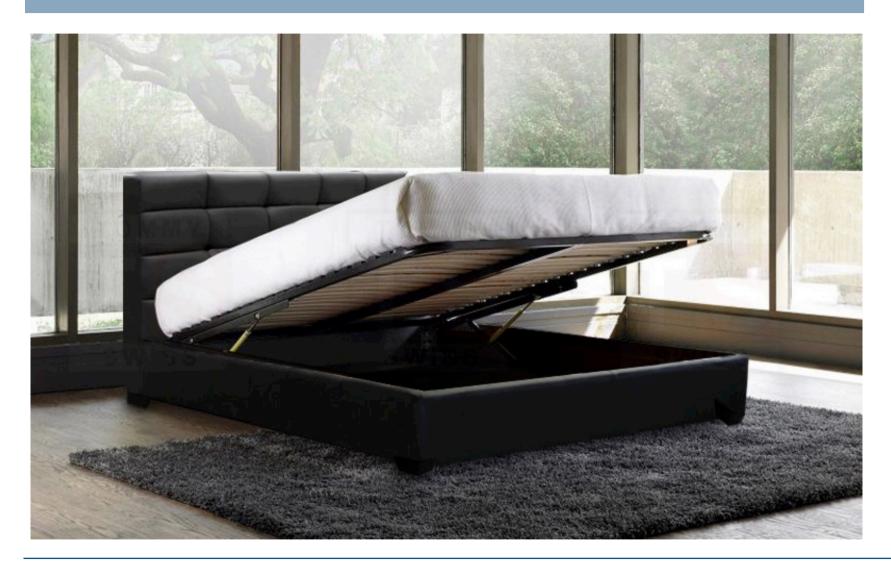




#### **Parts list**

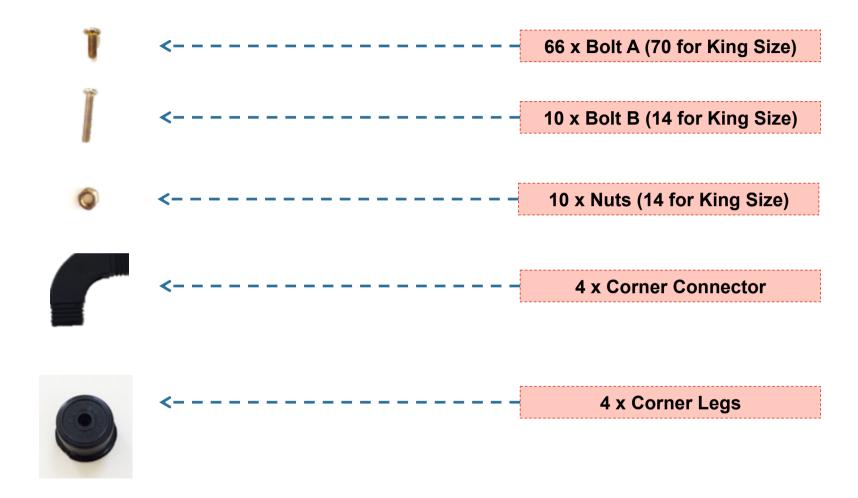



### Parts list - continued

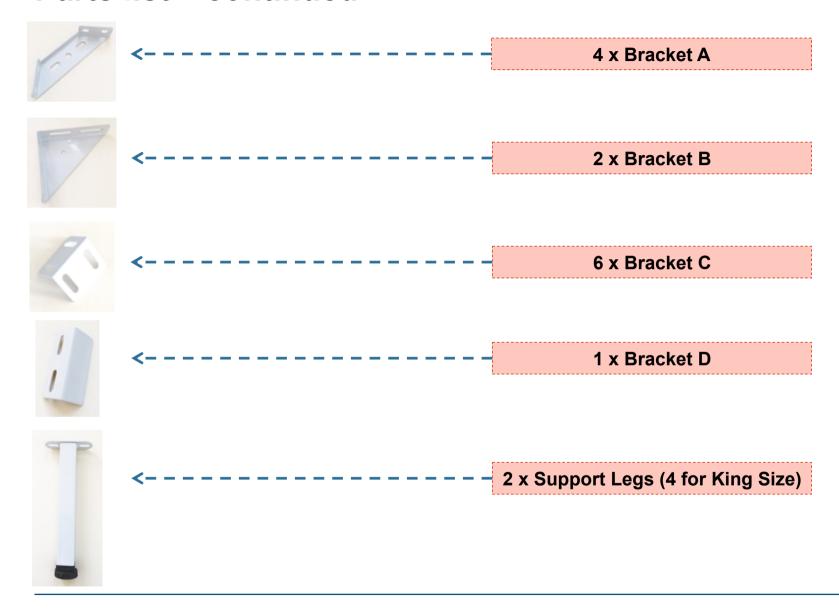



### Join the gas lift metal piece to the side panel




**Ensure holes are aligned before securing with Bolt A** 






### Attach the gas pressure strut as shown

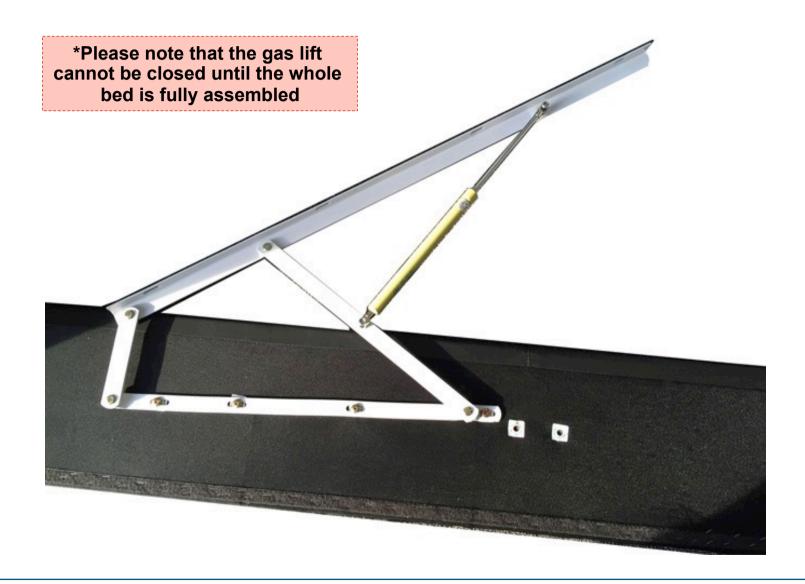



### Fix the 4 round legs in each corner

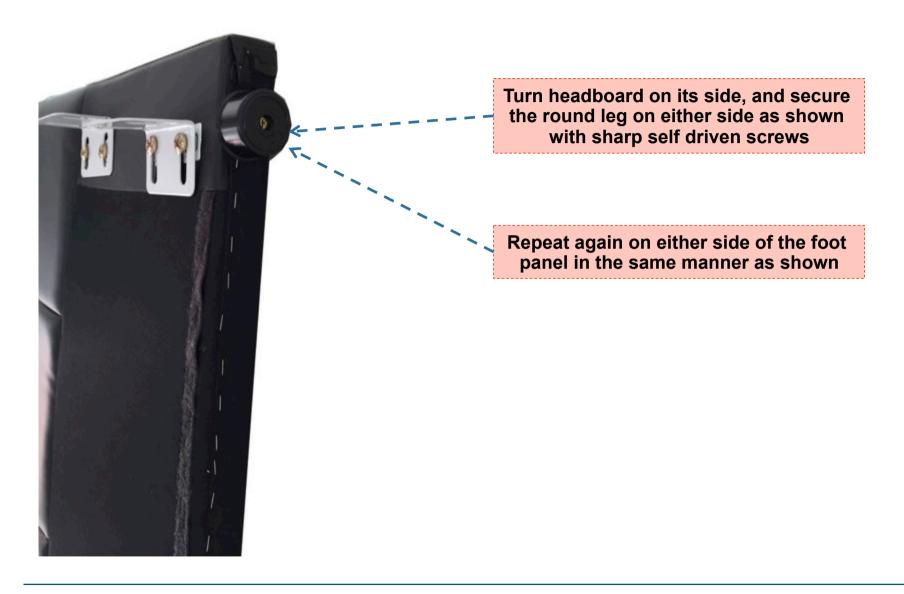



#### Join the 4 sides of the bed

Use 2 x rectangle brackets to join headboard to sideboard with Bolt A



Use 1 x triangle, 1 x rectangle bracket to join footboard to sideboard with Bolt A





# Join the support bracket to the middle of the footboard as shown below with Bolt A






### Build the inner metal frame for your gas lift bed

Use in each corner, a black corner Attach the middle support beam on plastic piece & metal piece to join the either end of the metal frame where 4 metal sides together with Bolt A the holes are positioned with Bolt A




### Attach the inner metal frame to the gas lift strut

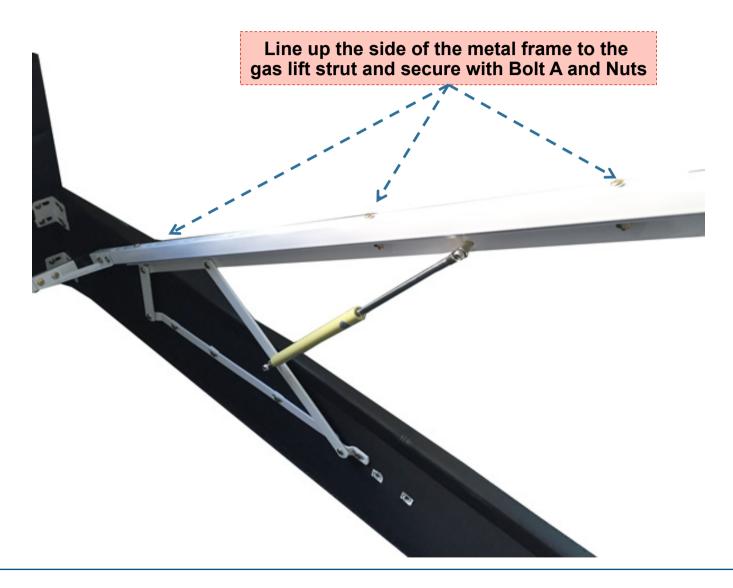



# Install fittings as shown below

Secure cross bar from left side panel to right side panel with Bolt A

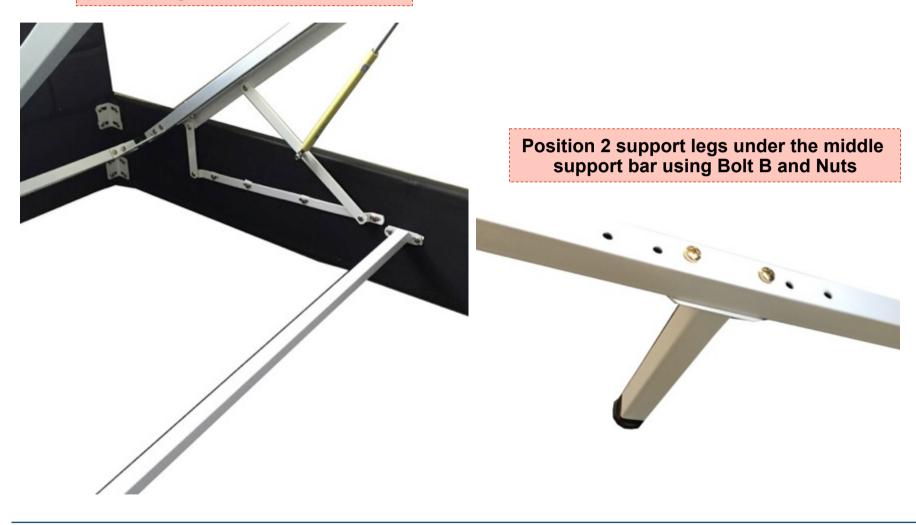



### Clip on the mattress holder near the headboard





# Fix the mat under the bed frame using velcro





# Attach wooden slats using single end clips and double middle plastic clips

